



☐

A

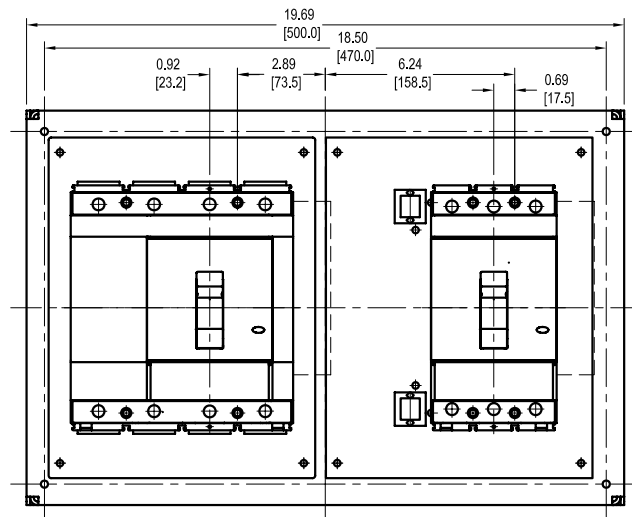


☐

B

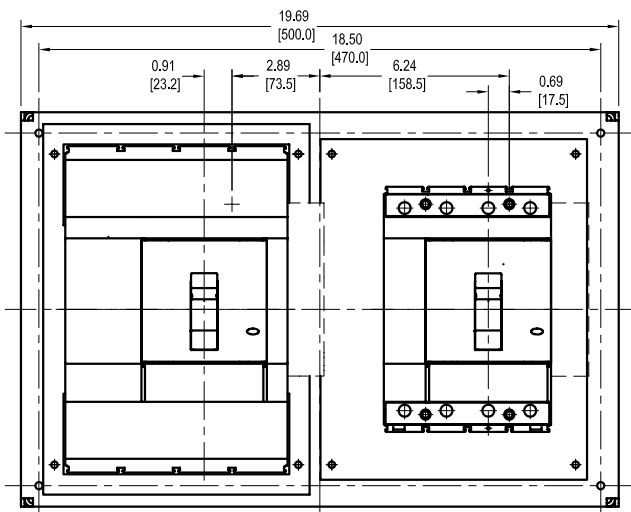


☐

C

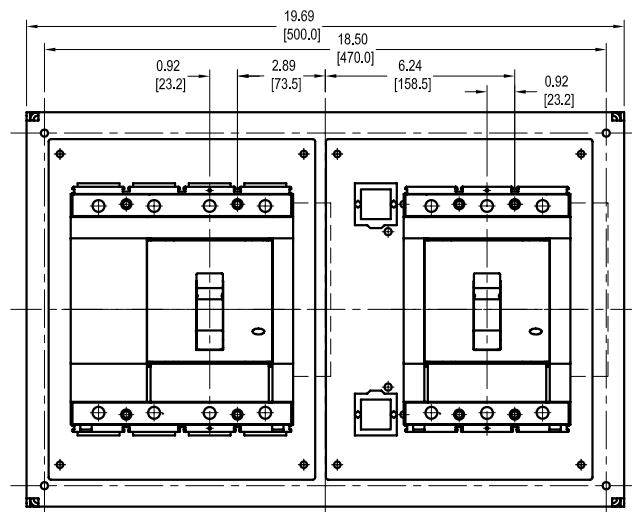


☐

D

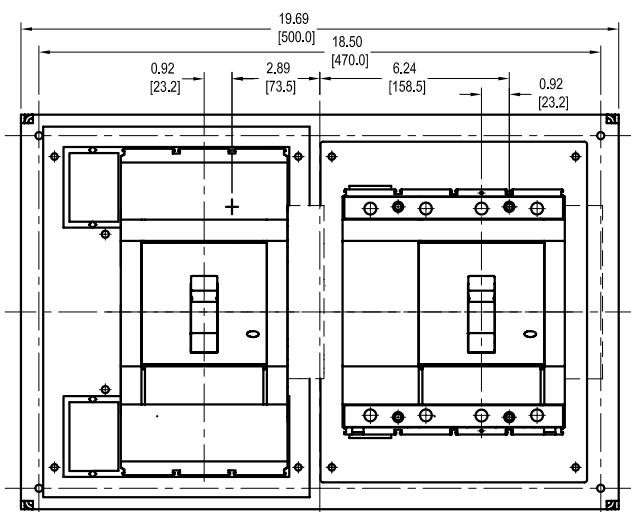

☐

E

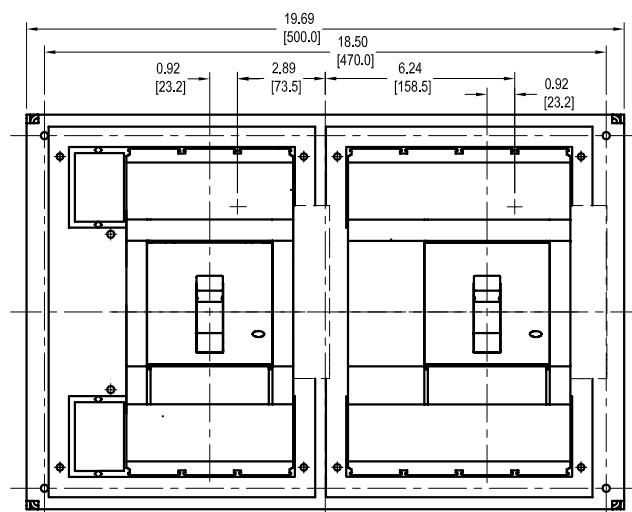

☐

F

INSTANCE	BREAKER TYPE (SEE NOTES)
A	T4 (F-P-W)
	T4 (F-P-W)
B	T4 (F-P-W)
	T5/400A (F-P-W) or T5/600A (F)
C	T4 (F-P-W)
	T5/600A (P-W)

INSTANCE	BREAKER TYPE (SEE NOTES)
D	T5/400A (F-P-W) or T5/600A (F)
	T5/400A (F-P-W) or T5/600A (F)
E	T5/400A (F-P-W) or T5/600A (F)
	T5/600A (P-W)
F	T5/600A (P-W)
	T5/600A (P-W)

NOTES:

(F) = FIXED BREAKER
(P-W) = PLUG-IN or DRAW OUT BREAKER
(F-P-W) = FIXED, PLUG IN or DRAW OUT BREAKER